

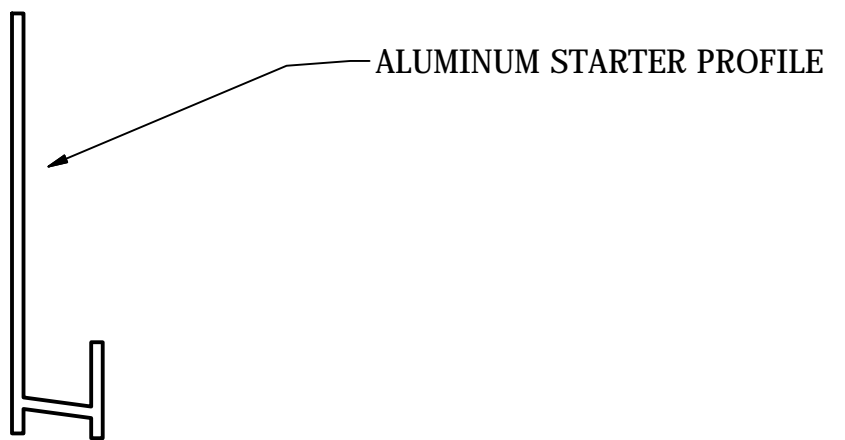


4 3 2 1


D C B A

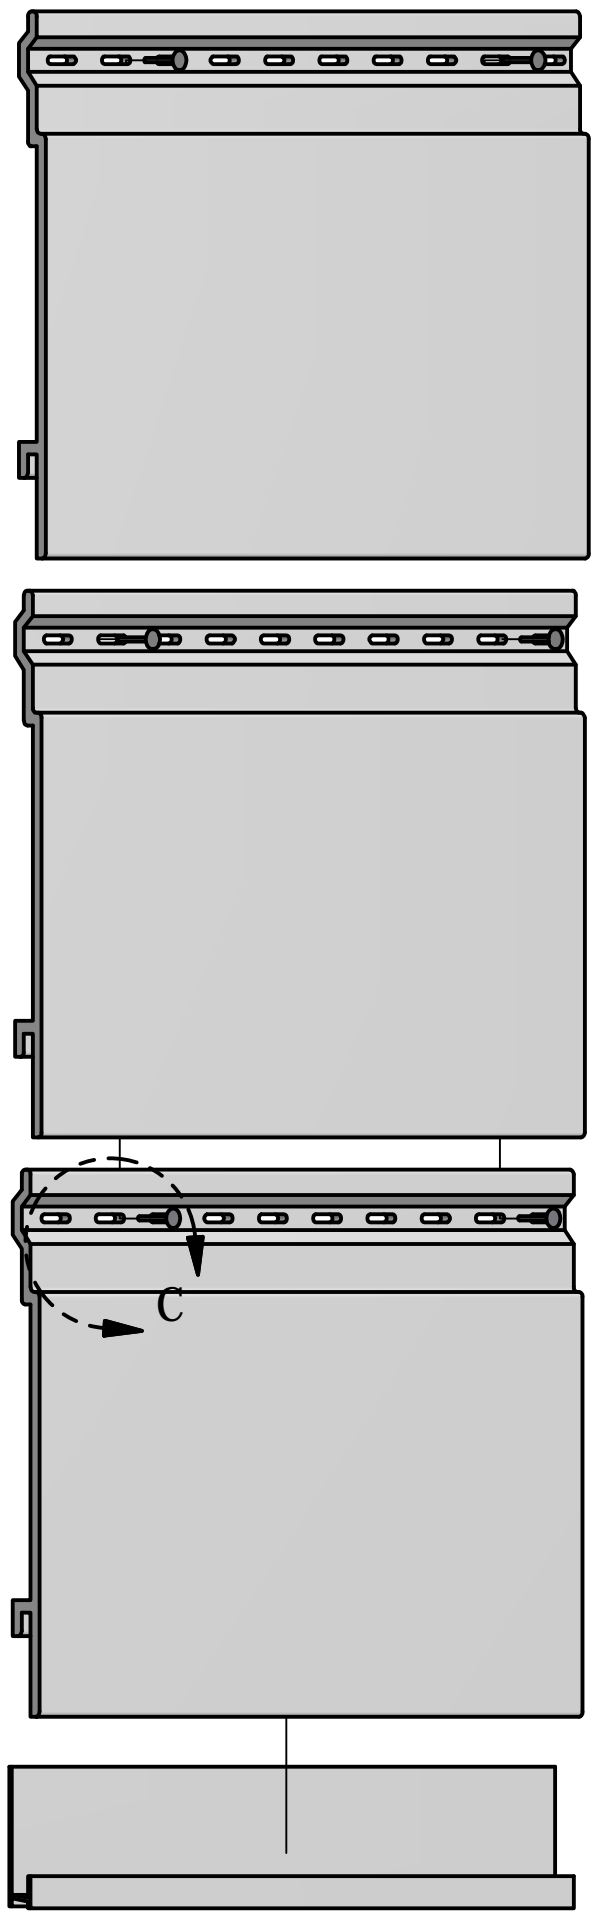


DETAIL C  
SCALE 1 : 1

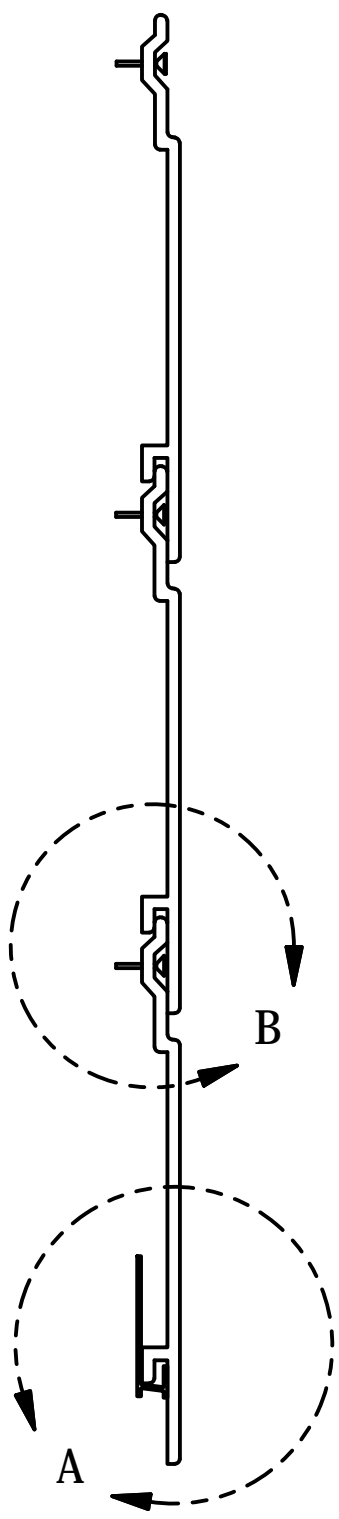

DETAIL A  
SCALE 2 / 3

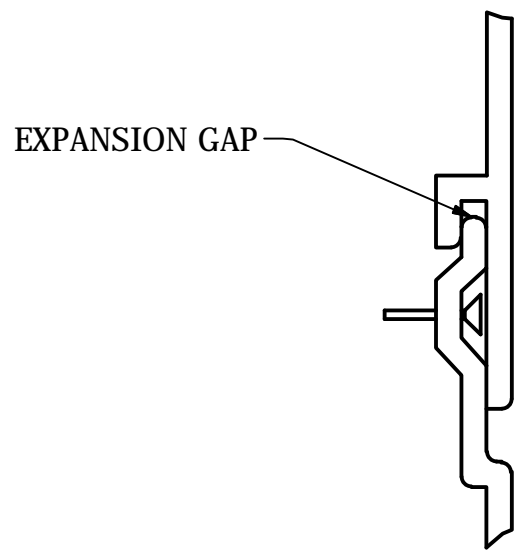

DETAIL B  
SCALE 2 / 3

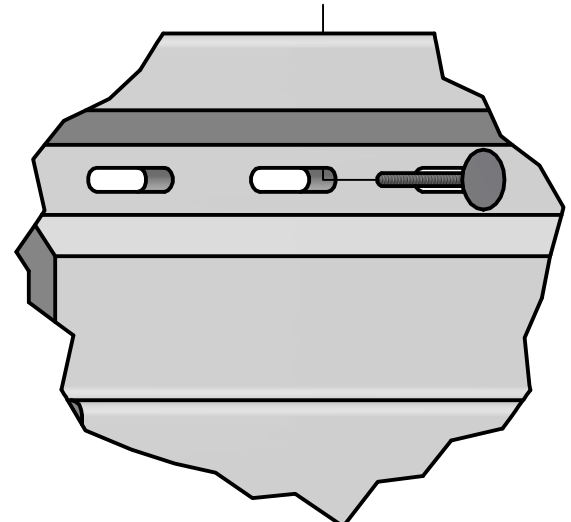

SCREW PLACEMENT IN CENTER OF SLOT  
\* DO NOT OVER TORQUE \*

- 1) Fasten Aluminum Starter Profile using #8x1.25" SS Screws every 16" to 24"
- 2) Place 1st piece of TECH-WOOD siding on channel of starter profile (detail A)
- 3) Attach siding using #8x1.25" SS screws every 16" to 20" in the center of precut slots.  
\* DO NOT OVER TORQUE \*

- 1) Place next piece of TECH-WOOD siding on top of 1st.  
\* There will be a specially designed gap between them. This allows for material expansion.
- 2) Attach siding using #8x1.25" SS screws every 16" to 20" in the center of precut slots.  
\* DO NOT OVER TORQUE \*

Proprietary and Confidential  
The information contained in this drawing is the sole property of TECH-WOOD. Any reproduction in part or in whole without written permission of TECH-WOOD is prohibited.

DRAWN S Myers	11/24/2008	TECH-WOOD NA		
CHECKED				
QA		Siding Installation Guide		
MFG				
APPROVED		SIZE C	DWG NO 3	REV
		SCALE	SHEET 1 OF 1	

4 3 2 1